Autonics

ROTARY ENCODER (INCREMENTAL TYPE) E60H SERIES

INSTRUCTION MANUAL

CE



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

×Please observe all safety considerations for safe and proper product operation to avoid hazards. ★★ symbol represents caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow these instructions may result in serious injury or death.

▲ Caution Failure to follow these instructions may result in personal injury or product damage.

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
 Failure to follow this instruction may result in personal injury, economic loss or fire.
- 2. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

 Failure to follow this instruction may result in explosion or fire.

 3. Install on a device panel to use.

- Failure to follow this instruction may result in fire.

 4. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire 5. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire 6. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in fire

⚠ Caution

- 1. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage 2. Do not short the load.

- Failure to follow this instruction may result in fire.

 3. Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists. Failure to follow this instruction may result in product damage.

Ordering Information

E60H	20	8192	- 3	- N	24	
Series	Shaft inner diameter	Pulses/ revolution	Output phase	Control output	Power supply	Cable
Ø60mm, hollow shaft type	Ø20mm	100,1024, 5000, 8192	3: A, <u>B</u> , Z _ 6: A, <u>A</u> , B, <u>B</u> , Z, Z	T: Totem pole output N: NPN open collector output V: Voltage output L: Line driver output	5: 5VDC ±5%	No mark : Radial cable type C: Radial cable connector type

Control Output Diagram

Totem pole output	NPN open collector output		Voltage output		Line driver output	
Rotary encoder circuit Load connection	,	Load connection	Rotary encoder circuit	Load connection	Rotary encoder circuit	Load connection
Sink current: Max. 30mA Output Source Current: Max. 10mA OV OV	Main oircuit	Output + Sink current - :Max. 30mA	Main circuit Nain circuit	Source current: Max. 10mA Output	Main circuit	A phase output

XAll output circuits of A, B, Z phase are same. (line driver output is A, \overline{A} , B, \overline{B} , Z, \overline{Z})

Totem pole output type can be used for NPN open collector output type (1) or voltage output type (**2).

**The above specifications are subject to change and some models may be discontinued without notice. **Be sure to follow cautions written in the instruction manual, and the technical descriptions (catalog, homepage).

Specifications


Specifications							
Item			Ø60mm hollow shaft type of incremental rotary encoder				
	Totem pole output		E60H203-T				
Mode	NPN open collector output		E60H20-				
Ivioue	Voltage output		E60H20- □ -3-V- □				
	Line driver output		E60H206-L				
Resolution (PPR) ^{×1}		PR) ^{×1}	100, 1024, 5000, 8192				
	Output phase		A, B, Z phase (line driver output: A, A, B, B, Z, Z phase)				
	Phase difference of output		Phase difference between A and B: $\frac{T}{4} \pm \frac{T}{8}$ (T=1cycle of A phase)				
		Totem pole output	•[Low] - Load current: max. 30mA, residual voltage: max. 0.4VDC::- •[High] - Load current: max. 10mA, Output voltage (power voltage 5VDC::-): min. (power voltage-2.0)VDC::-, Output voltage (power voltage 12-24VDC::-): min. (power voltage-3.0)VDC::-				
	Control	NPN open collector output	Load current: max. 30mA, residual voltage: max. 0.4VDC==				
_	output	Voltage output	Load current: max. 10mA, residual voltage: max. 0.4VDC==				
Electrical specification		Line driver output	•[Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC== •[High] - Load current: max20mA, Output voltage (power voltage 5VDC=): min. 2.5VDC==, Output voltage (power voltage 12-24VDC=): min. (power voltage-3.0)VDC==				
<u>a</u>	Re-	Totem pole output	, , , , , , , , , , , , , , , , , , , ,				
Electric	sponse time (rise /	NPN open collector output	Max. 1μs (cable length: 2m, I sink = 20mA)				
"		Voltage output					
	fall)	Line driver output	Max. 0.5μs (cable length: 2m, I sink = 20mA)				
	Max. response frequency		300kHz				
	Power supply		•5VDC== ±5% (ripple P-P: max. 5%) •12-24VDC== ±5% (ripple P-P: max. 5%)				
	Current	consumption	Max. 80mA (disconnection of the load), Line driver output: max. 50mA (disconnection of the load)				
	Insulatio	n resistance	Over 100MΩ (at 500VDC megger between all terminals and case)				
	Dielectri	c strength	750VAC 50/60Hz for 1 minute (between all terminals and case)				
	Connect	tion	Radial cable type, radial cable connector type				
a G			Max. 150gf·cm (0.0147 N·m)				
Mechanical specification	Moment of inertia		Max. 110g·cm² (11×10 ⁻⁶ kg·m²)				
di G	Shaft loading		Radial: 5kgf, Thrust: 2.5kgf				
Spe Me	Max. allowable revolution**2		6,000rpm				
Vibration			1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours				
Shock			Approx. max. 100G				
Ambient tempera		Ambient temperature					
Enviro	Ambient humidity		35 to 85%RH, storage: 35 to 90%RH				
Protection structure			IP50 (IEC standard)				
Cable			Ø5mm, 5-wire (line driver output: 8-wire), 2m, Shield cable (AWG24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1mm)				
Acces	ssory		Bracket: 2				
Appro			€ (except line driver output)				
Weight ^{**3}			Approx. 397g (approx. 330g)				
3/2 1 N	latinaliaa	ted resolutions are cu					


X1. Not indicated resolutions are customizable

[Max. response revolution (rpm) = $\frac{\text{Max. response frequency}}{\text{Non-transformation}} \times 60 \text{ sec.}$] Resolution

※3: The weight includes packaging. The weight in parenthesis is for unit only. XEnvironment resistance is rated at no freezing or condensation.


Dimensions

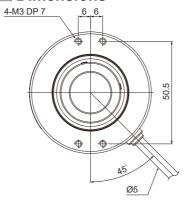

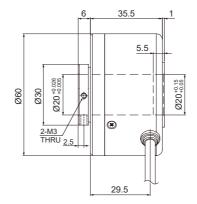

Cable for Radial cable type	Cable for Radial cable connector type
Ø5mm, 5-wire (line driver output: 8-wire),	Ø5mm, 5-wire (line driver output: 8-wire
Length: 2000mm, Shield cable	Length: 250mm. Shield cable


O Bracket

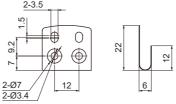


※Fix the unit by a wrench under 0.15 N⋅m of torque

Connections

Radial cable type

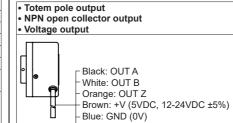

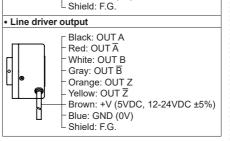

XUnused wires must be insulated

**The metal case and shield cable of encoder should be grounded (F.G.). *Do not apply tensile strength over 30N to the cable.

Radial cable connector type

Totem pole output NPN open collector output . Line driver output


Voltage output



in No.	Function	Cable color	Pin No.	Function	Cable color
	OUTA	Black	1	OUT A	Black
	OUT B	White	2	OUTĀ	Red
	OUT Z	Orange	3	+V	Brown
	+V	Brown	4	GND	Blue
	GND	Blue	5	OUT B	White
	F.G.	Shield	6	OUT B	Gray
			7	OUTZ	Orange
_			8	OUTZ	Yellow
			9	F.G.	Shield

※F.G. (Field Ground): It should be grounded separately.

Output Waveforms

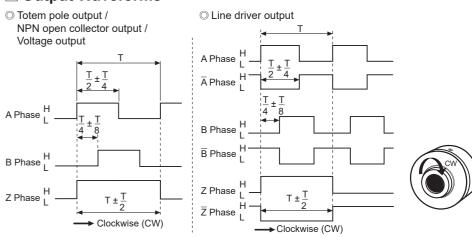

Cautions during Use

1. Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.

■ Temperature Controllers ■ Temperature/Humidity Transducers

SSR/Power Controllers

■ Tachometer/Pulse (Rate) Meters

Counters

■ Panel Meters

■ Sensor Controllers

■ Timers

- 2. 5VDC, 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply
- 3. For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- 4. Ground the shield wire to the F.G. terminal
- 5. When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- 6. Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- 7. Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between lines.
- 8. This unit may be used in the following environments.
- ①Indoors (in the environment condition rated in 'Specifications') ②Altitude max. 2.000m
- ③Pollution degree 2
- 4 Installation category II

Major Products

- Fiber Optic Sensors ■ Door Sensors
- Door Side Sensors ■ Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers ■ I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co₂, Nd: YAG)
- Laser Welding/Cutting System

Autonics Corporation

■ HEADQUARTERS:

18, Bansong-ro 513 beon-gil, H Korea, 48002 TEL: 82-51-519-3232

DRW171371AC